

Truma Combi



Quick Reference CP Plus Functions



 
ADJUST ROOM TEMPERATURE

Range: 40-86°F (5-30°C)



SELECT ENERGY MODE

- a) LP gas
- b) MIX 1* - Electricity 850W + Gas
- c) MIX 2* - Electricity 1700W + Gas
- d) EL* - Electricity 850W
- e) EL* - Electricity 1700W




ADJUST WATER TEMPERATURE



A) BOILER

 Hot water generator is on.
Icon flashes until desired temperature is reached.



B) ECO

Water temperature is 104°F (40° C)

C) HOT

Water temperature is 140°F (60° C)

D) BOOST

Boiler content is heated quickly (boiler priority) for up to 40 minutes. The water temperature is then kept at the higher level (about 144° F (62° C) for two subsequent heating cycles. When the water temperature is reached, the room is heated again.

Truma Combi

Quick Reference CP Plus Functions - Cont.



SET CLOCK TO CURRENT TIME



SET TIME SWITCH

Set a start time and end time for room temperature, water temperature, energy mode and fan speed set points.



SETTINGS

Index - Show version number of connected device

Bright - Adjust backlighting

Lang - Adjust language

12-24h - 12/24 hour mode

Temp - °F or °C

Offset - Calibrate temp offset

Pr set - Factory reset



SELECT FAN SPEED

OFF

Fan is switched off (If furnace mode OFF)

A) VENT

Circulating air (If furnace mode OFF)

B) ECO

Low fan speed

C) HIGH

High fan speed

D) BOOST

Fast room heating. Available if the difference between the selected and current room temperature is >18° F (10° C)

